## **TC-6M People Counter**

Adjustable range to 0.2 metres to 6 metres

Suggested installation height 1.25 metres.

Latest TOF technology - No "reflector" needed - 40 mm wide beam

Red LED on the face of the sensor is dull to indicate powered up.

Red LED is brighter when beam is broken and the TC-6M counts.

4 digit resettable TC Counter Module (8 digit also available for a limited time).

Supplied with 12 Volt DC Switchmode Power Supply.

Usually installed using double –sided tape or affixed using screws.

Enclosure Diecast aluminum - Powder coated matt black

**To Reset to zero** stroke enclosure to the right or below the number with a magnet – two supplied in with the TC-6M.





The sensor will usually come calibrated to a specific distance for you –

If you want to change the distance: Calibrating the sensor to the desired sensing range:

Power sensor up – point it at an object – e.g. a wall 20 cm closer than the distance to be sensed over – e.g. for an entrance of 3 metres – point the sensor at a wall 2.8 metres from the sensor - Press Button for 2 seconds until the LED on the front of the sensor blinks – keep the sensor in position pointing towards the wall being used for calibration – the sensor will blink for up to 30 seconds - **when the LED stops blinking the sensor is calibrated** to the desired distance – even if the sensor is disconnected from power it will keep the calibration when powered up again.

## **TotalCount**

+61 3 98743 5189